

Thursday, September 14, 2017

## **T.P.S or T.P.I. Adjustment.**

The Brucato ACU does not use your factory TPS, so no adjustment is ever needed. As a matter of fact, you don't even need to have a TPS. One less thing to worry about.

The Brucato ACU uses MAP sensor readings (the yellow hose) along with engine RPM to determine theoretical throttle position.

On our older ACU's with the grey cast housing, or with the Brucato PCU, it's recommended that you disconnect the TPS to avoid any problems. This is not necessary with the new black billet ACU's, as they are ready to go even with the TPS plugged in.